



4 Cup Coffee Maker



Model EHC-2022

Instruction Manual

Before operating your new appliance, please read all instructions carefully and keep for future reference

IMPORTANT SAFEGUARDS

WARNING: To avoid the risk of electrical shock, always make sure the coffee maker is unplugged from the electrical outlet before assembling, disassembling, relocating, servicing, or cleaning it.

- **READ ALL INSTRUCTIONS BEFORE USE.**
- This coffee maker is intended for indoor, household, non-commercial use for brewing coffee. Do not use the coffee maker for any other purpose.
- Keep the coffee maker out of reach from children and pets. This coffee maker is not intended for use by children. Extra caution is necessary when using this product near children.
- Never leave the coffee maker unattended while it is in use. Always unplug the coffee maker from the electrical outlet when storing.
- Always operate the coffee maker on a flat, level, and stable surface.
- Do not place the coffee maker in areas or on surfaces (for example: carpets) that may be damaged by water, heat, or moisture. We will not be liable for any water-related damage that occurs during the use of this product.
- Do not set the hot carafe on a wet or cold surface as the temperature difference between the hot carafe and the colder surface may cause the carafe to break or crack.
- Do not place the coffee maker or the carafe on or near gas or electric burners. Do not place the coffee maker or the carafe inside of, or on top of, a microwave oven or conventional oven.
- Do not operate this product or any other electrical product in the presence of explosives and/or flammable fumes.
- Use only product manufacturer's attachments with this product; otherwise a risk of fire, electrical shock, or personal injury may result.
- Do not touch hot surfaces of this product. Always touch the product using the handle and knobs. Never move the coffee maker when it is in use or while it contains hot liquid. Allow the unit to cool completely before handling. Do not touch the glass portion of the carafe or other hot surfaces of the coffee maker.
- Do not operate the coffee maker if it has a damaged power cord or plug. Do not operate the coffee maker if it shows signs of damage. This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform any repairs.
- Do not remove bottom cover of coffee maker, as there may be a risk of fire or electrical shock.
- Do not immerse the power cord or plug in, or otherwise expose them to, water or other liquids, as an electrocution hazard may result.
- Do not allow the power cord to hang over the edge of a table or counter where it may get tripped over or pulled.
- Keep the power cord and product away from heated surfaces.
- To disconnect product from an electrical outlet, pull directly on the plug; do not pull on the power cord.

- Keep the carafe lid on the carafe while brewing and serving coffee. Never operate the coffee maker without the carafe in place on the warming plate and the carafe lid closed.
- Do not open the lid to the water reservoir or the filter basket while the coffee maker is brewing. Allow the filter basket to cool completely before removing it from the coffee maker.
- The carafe is designed solely for use with this coffee maker. Do not use the carafe on a stovetop heating element or with other products.
- Do not use the carafe if it has a loose, weakened handle or if it is cracked, chipped, or otherwise damaged.
- Do not clean the carafe with steel wool pads or other abrasive cleaners and materials.
- This product is for indoor use only. Do not use this product outdoors, as an electrocution hazard exists.

SHORT CORD PURPOSE

NOTE: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

Longer power-supply cords or extension cords are available and may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG


If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

PARTS & FEATURES

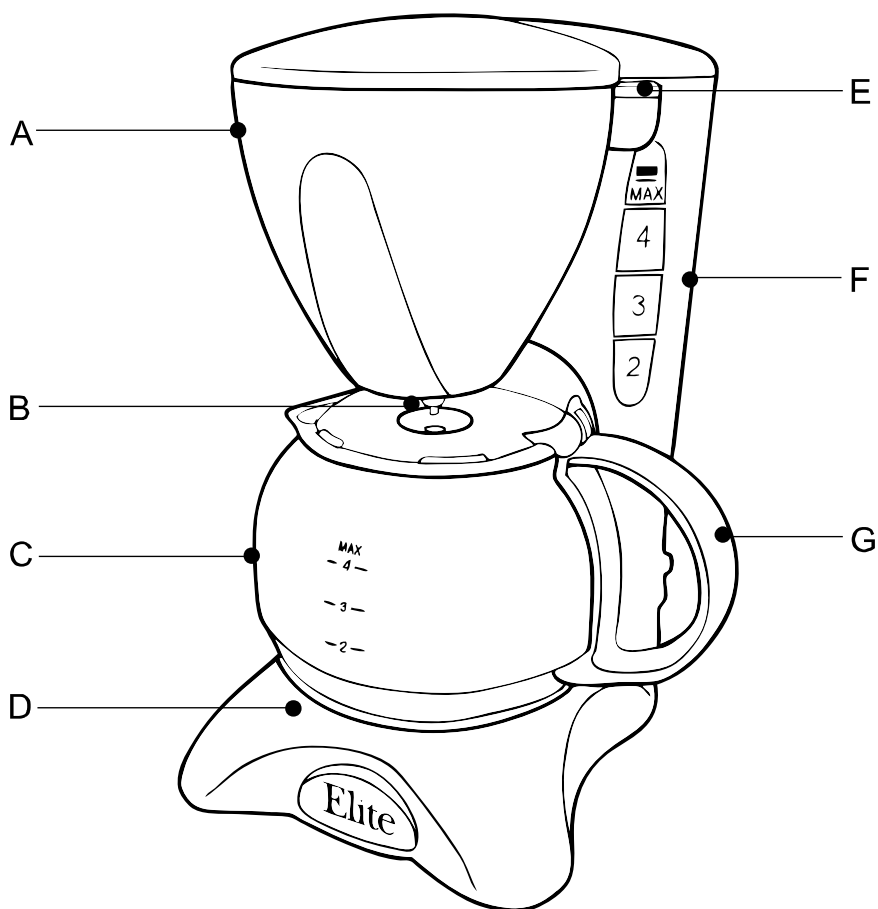

- A) Swing-Out Filter Compartment
- B) Pause 'N Serve Spring Release
- C) 4 Cup Capacity Glass Carafe
- D) Heating Element Base
- E) Filter Release Guide
- F) Water Reservoir Tank
- G) Carafe Handle

BEFORE FIRST USE

- Unpack all packaging materials and clean the coffeemaker thoroughly. Allow to dry before first use.
- Before the first use, please check if all the parts of the appliance are in good condition. If not, please contact the seller or manufacturer.
- It is recommended to run the coffeemaker for one cycle with just plain water and no coffee to clean the internal parts of the coffeemaker.

HOW TO USE

- Open the filter compartment from left side and take out the built-in removable filter, then put ground coffee into the filter evenly.
- Reinstall the filter, close the filter compartment and click it back into place.
- Open the lid.
- Fill up the glass carafe with cold water and pour in to the water reservoir tank.
- Put the carafe with the lid onto the hotplate; the lid of the carafe pushes the lever and opens the drip hole.
- Plug the coffee maker into an electric outlet and switch to ON
- After a few minutes hot coffee drips into the carafe through the drip hole.

PAUSE 'N SERVE FEATURE:

During the middle of brewing process, you can pause the cycle by simply removing the carafe out of the coffee maker to sneak a cup of coffee. A special built-in device will pause the brewing cycle and keep coffee from dripping into the carafe.

AFTER USE

- When the last drop has dripped out of the filter, the carafe can be removed from the hot plate; the lever goes back automatically and closes the drip hole.
- Put the carafe with the remaining coffee back on the hotplate to keep the coffee warm.
- After drinking, please switch the appliance off and unplug the appliance. The pilot light will turn off.
- Remove the coffee filter and the remaining coffee grounds, then clean the filter.
- If more coffee is required, please switch off the appliance first. After cooling the appliance for 5 minutes, pour cold water into the water tank.

CARE AND MAINTENANCE

- Always remove the main plug from the wall socket before cleaning the appliance.
- You may clean the unit with a damp cloth. Never immerse the unit in water or wash it directly in water.
- The removable filter can be washed directly with water or in a dishwasher. Always note not to damage the filter mesh.
- When de-scaling, operate the appliance twice using white vinegar instead of water to fill the water reservoir tank
- Let the appliance work twice more with only water to rinse away the remaining scale and vinegar

LIMITED WARRANTY* ONE (1) YEAR:

Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service. This product warranty covers only the original consumer purchaser of the product.

Warranty is only valid with a dated proof of purchase.

To guarantee repair or replacement without charge, a dated sales receipt showing purchase within the limited warranty period* must accompany the appliance. Without a sales receipt, warranty will be estimated according to the appliance's manufactured date. A comparable appliance should arrive within 2-3 weeks. However, in case an appliance is not covered by warranty, correspondence offering alternatives will be mailed to you.

During the one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below). The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.

This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does NOT cover:

- Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
- Damages caused in shipping.
- Damages caused by replacement or resetting of house fuses or circuit breakers.
- Defects other than manufacturing defects.

- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Consumer's remorse is not an acceptable reason to return a product to our Service Center.
- *The consumer is responsible for any delivery charges for all replacement units provided for exchange under the warranty.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #. We cannot assume responsibility for loss or damages to products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your return: any accessories related to the problem, your full address and daytime phone number, a note describing the problem, a copy of the dated sales receipt or other proof of purchase and a valid RA#.

C.O.D shipments cannot be accepted.

*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

**Any instruction or policy included in this manual may be subject to change at any time.

Model EHC-2022

Elite Cuisine **4 Cup Coffeemaker**

Distributed by:

MAXI-MATIC®, USA 18401 E. Arenth Ave. City of Industry, CA 91748

Customer Service Dept: (626) 912-9877 Ext: 107/120 MON-FRI 8am-5pm PST

Email: info@maxi-matic.com | Website: www.maxi-matic.com